



Basic High Pressure Skirt Detail

Photos show **HydroGapSA** w/**HydroFlashGP** flashing tape, but can be done with other **BOI** products; consult with Tech Support to confirm application.

1) Window installed with open bottom/sill nail flange



- 2) Cut a section of WRB ([FlatWrapHP](#) shown) the width of the window and 10" in height/length. Using flashing tape, at the same width of window, install below window. (4" tape used in photos). Be sure to have half the width of the tape on the WRB, and adhere the rest to the bottom/sill nail flange. DO NOT flash the open sill closed with the tape, making sure the WRB over laps the flange.

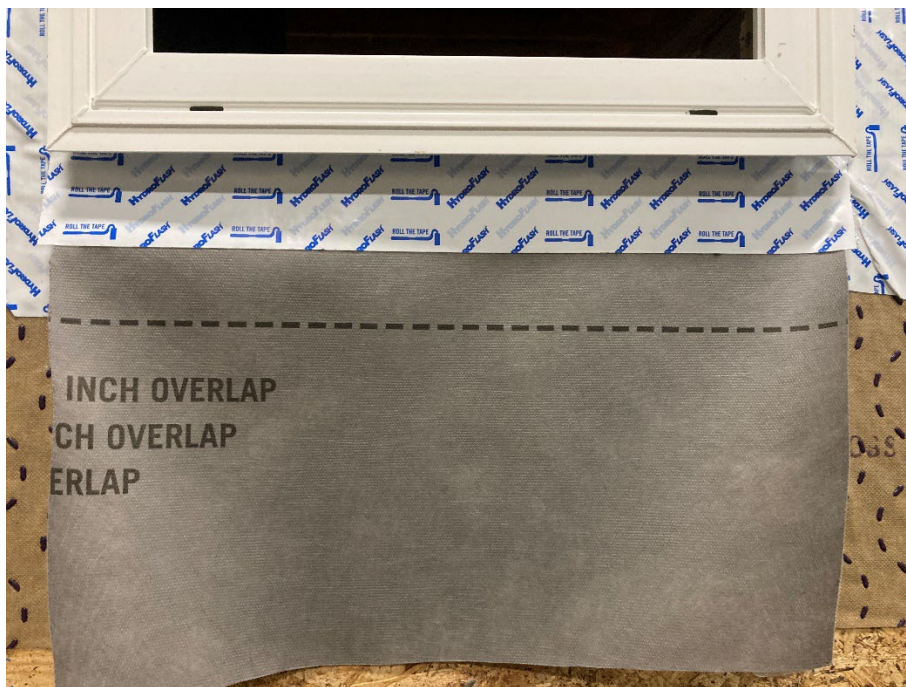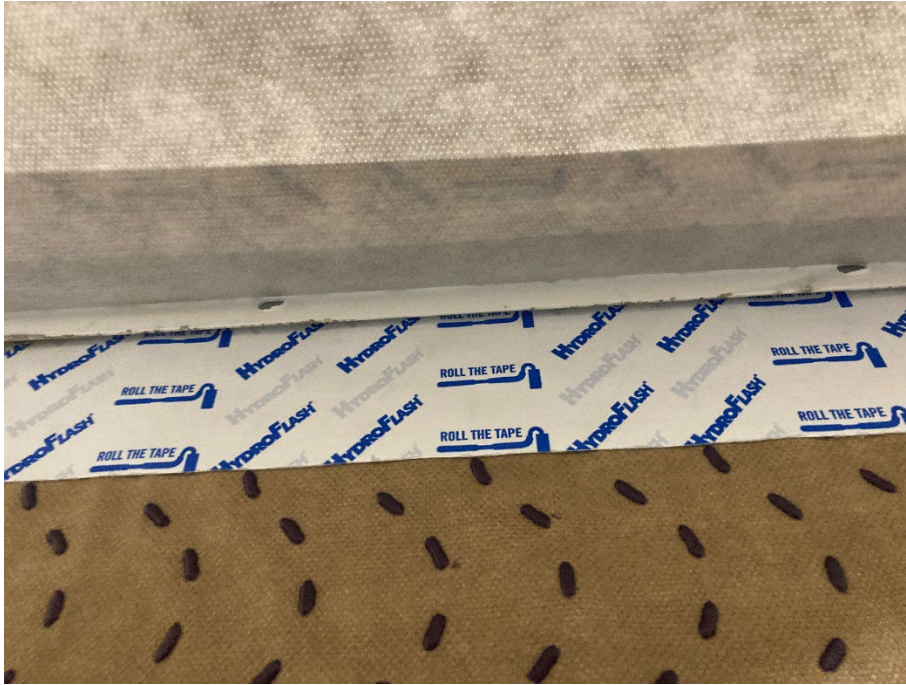

- 3) Install flashing tape on the vertical seams of the skirt.
- a. *Optional:* skip flashing detail along the bottom of skirt

